

Replacing a HydroMassage Touch Screen

Tools needed:

- **Medium Phillips head screw driver**
- **Small Phillips head screw driver**

IMPORTANT: The following steps are to be performed on the HydroMassage Bed after the 220 volt power cable is unplugged from the wall outlet and the PC turned off

Step 1: Unplug the 220 volt power cord from the wall outlet and turn the PC off before starting to work on the bed




Step 2: Unsnap and peel back Cover Sheet and Comfort Pad from the edge of the bed.



Step 3: Unscrew all 4 screws on the back of the touch screen.

NOTE: The screen may or may not have a cable cover depending on the model. If so, remove it.

Use small Phillips head screw driver to disconnect flat gray cable from the touch screen. Then disconnect all other cables from touch screen.

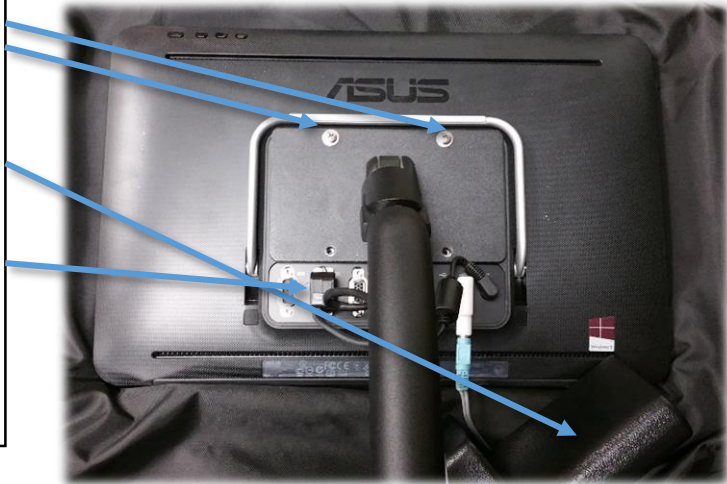

Step 4: Remove touch screen arm from bed frame. Place old and new touch screens face down on the bed.

NOTE: The bottom of the arm may be greasy so try to keep off of sheet.




Step 5: Align touch screen arm on the back of the new touch screen. Using two screws (with 2 washers on each screw), attach arm to touch screen by the top two screws.

Plug in all cables. Screw flat gray cable to port closest to the center of the screen.

Attach cable cover to the back of the touch screen using remaining two screws.

Step 6: Apply grease to the bottom of arm. There is grease located at the foot end of the bed, wire tied to the frame.

Then place arm back into receiver.

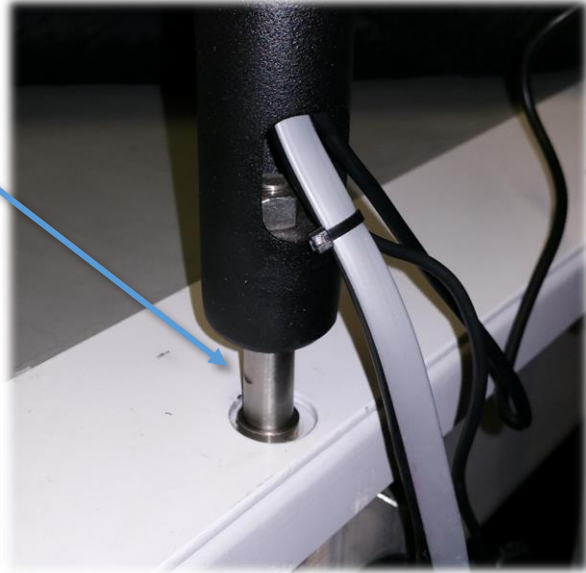

Step 7: Snap the Cover Sheet and Comfort Pad back in place.

Then power on the PC, after the software has fully loaded, plug the 220 volt plug back into the outlet to reinitialize the bed.

