

440X / 450X Lounge Maintenance Schedule

REBOOT

WEEKLY

1. Unplug main power from the outlet.
2. Wait 60 seconds and then plug the main power plug back in.
3. Wait approximately 45 seconds for the Touchscreen to boot and the unit to finish initializing.
4. Then run the bed normally.

WIPE DOWN


- As a best practice, the HydroMassage® Sheet Cover should be sprayed and wiped down every massage session using a disinfectant with the following criteria: Neutral pH between 5 and 8.
- Never use a disinfectant that falls under the following categories:
 - Phenolic based disinfectant, Bleach or chlorine-based disinfectant, Highly acidic disinfectant (pH below 5) or Highly basic disinfectant (pH above 9)

WATER

EVERY 3 MONTHS

- Check water level using Touchscreen default screen: Add distilled water as needed.
- Add two tsp of Defoamacide (Shake Well) with 8 ounces of distilled water using the filler tube attached behind the head panel of the lounge. **IMPORTANT:** Only use HydroMassage Defoamacide and distilled water.

Note: The filler tube and Defoamacide are attached by the filler tube at the head end of the lounge.

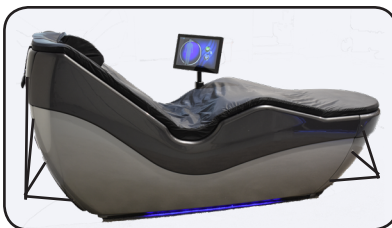

SIDE PANEL SCREWS



FILL TUBE



Foot Panel

AIR FILTER

- Vacuum dust from cooling system intake; either the filter under the panel at the foot end of the unit (if equipped with a radiator), or the fins on the External Temperature Control Unit.



RENEW & INSPECT

EVERY YEAR

- Drain the distilled water, wipe out the lounge, and refill with 12 gallons of distilled water and two teaspoons (two capfuls) of Defoamacide.
- Replace rubber barrier (P/N RSB-1238) yearly or every 1200 hours (whichever comes first).
- Check net, comfort pad, top sheet, and pillow cover for rips or signs of wear. Replace as necessary.
- Check drive belt for proper tension. Adjust if necessary.